




VENT HOOD DUCT COVER

Applicable to all standard and telescoping Duct Covers.

Read and follow all instructions.

The vent hood duct covers are packaged and ready to be installed.

Carefully slide the duct cover into the area above the secured vent hood.
Ensure the bottom perimeter of the duct cover sits flush with the top of the vent hood.
From inside the hood, use a Phillips screwdriver and the provided hardware to secure the duct cover.
Fasten screws through the vent hood's clearance holes (see figure below).

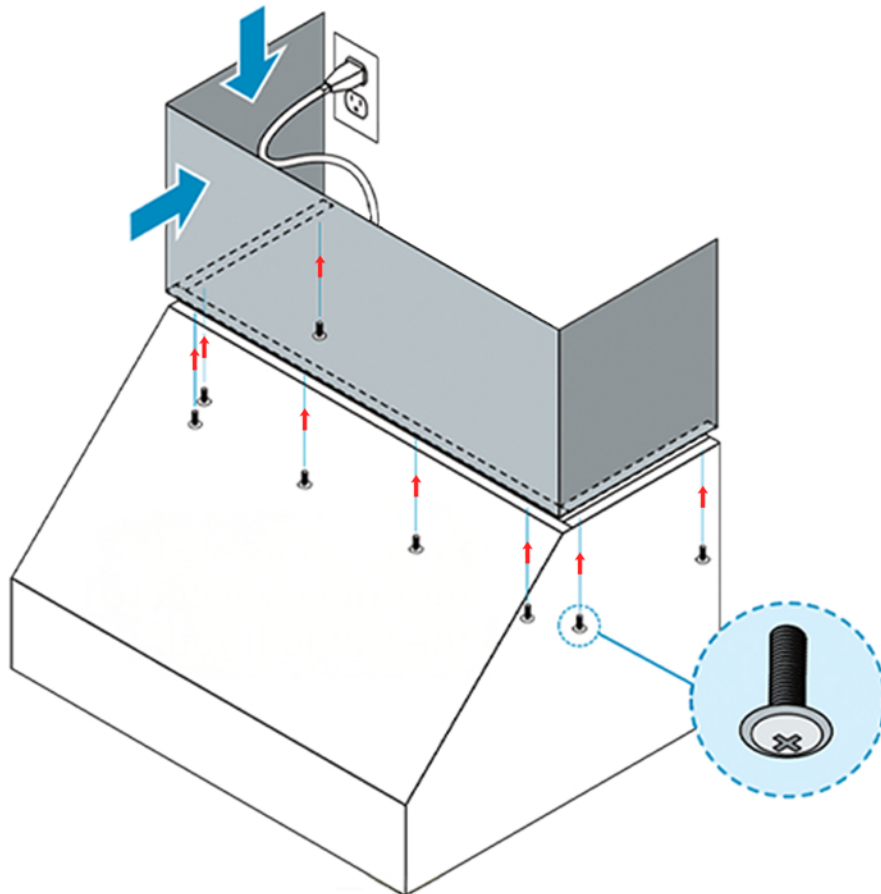

Refer to the parts list below to identify the hardware included with your duct cover for installation.

Note: If wall-mounted spacers are used with the vent hood, a duct cover filler panel may be purchased separately to close the gap between the duct cover and the rear wall. Visit www.amddirect.com for more information.